




MAID 2 WASH GLASSWASHERS OPERATING INSTRUCTIONS

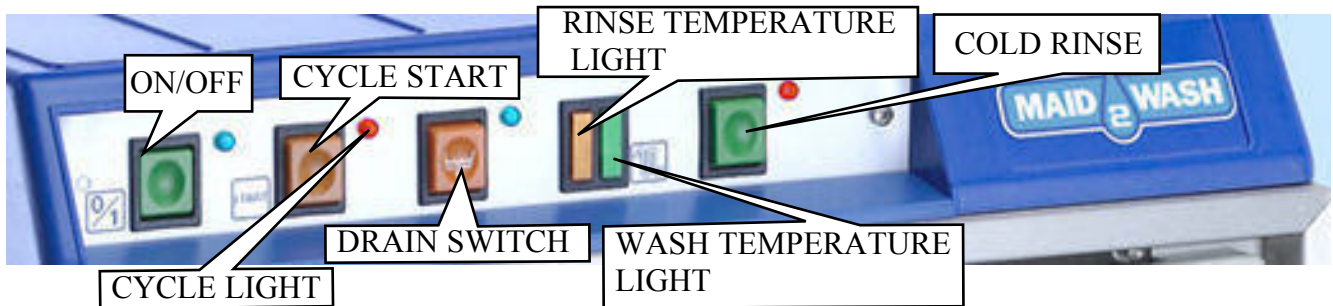

Switch on machine (push switch until it clicks)

Wait for machine to fill and heat up (approx. 1/2hr)

Whilst heating the rinse temperature light will illuminate and then go out, then the wash light will illuminate and go out.

Once the wash light has gone out the machine is then ready to wash (**this procedure is on initial fill only**).

- Open the door, put basket into machine, close door
- push the cycle start switch (**hold for 3 seconds**)

The cycle light will **illuminate** and start to wash, when the cycle has completed the cycle light will go **out**.

If you require a cold rinse to cool down the glasses quickly press & hold the cold rinse switch at the end of a cycle.

- Open the door & remove the basket
- For further washes repeat above process.

DRAINING MACHINE

On DP (drain pump models) make sure the on/off switch is set to OFF then push the drain switch and hold for approx 3 seconds, then release, the drain timer will drain off the machine in approx 3 minutes - the light at the side of the switch will go out when the process is complete

PLEASE NOTE: On some models the drain switch and the cold rinse switch will be situated the opposite way round

- On models without a drain pump simply pull out the drain plug inside the machine to drain making sure the machine is **switched off**

CLEANING OUT

- Remove lower wash arm assembly & saucer washer
- Remove wash tank filters and support frame work.
- Remove pump filter from bottom of wash tank.
- Clean all parts and replace in reverse order –

THE SAUCER WASHER FITS LIP UP.

