

AQUATEC

COMMERCIAL WAREWASHING EQUIPMENT



Program switch

Cycle time switch



Back of dishwasher showing
Detergent hose (clear)
Rinse aid hose (blue line)
Drain hose, 13 amp plug



Wash arm - Rinse arm - Filter - drain stand pipe



Top wash and rinse arms

Operating instructions

(Aquatec Rapide)

1. Ensure the dishwasher is fully assembled with wash arms, rinse arms filters and drain stand pipe in place.
2. Ensure that you have rinse aid and detergent connected to the correct hoses that come out of the rear of the dishwasher.
3. Turn on the water supply at the wall
4. Ensure that the drain hose from the dishwasher is connected to your drains
5. Plug the dishwasher into the wall socket and turn the socket on
6. Turn the program switch on the dishwasher to Wash. (The power on light will come on).
7. The machine will fill and heat, when the dishwasher is up to operating temperature the ready light comes on, you can use the dishwasher.
8. Turn the cycle time switch to the desired time (maximum 0-240 seconds). (the dishwasher will not operate with the door open)
9. The dishwasher will wash for the selected time and then rinse. At the end of the cycle the switch returns to "0". You can then unload the dishwasher.
10. The dishwasher automatically doses rinse aid and detergent each cycle, as well as maintaining the correct water level in the wash tank.
11. To completely drain the dishwasher, remove the drain stand pipe. **DO NOT REMOVE THE FILTERS.** Turn the programme switch to drain. Turn the cycle time switch to 240. The dishwasher will now drain. (The dishwasher will not drain with the door open). When cycle switch returns to "0". Turn programme switch to off.
12. You can now clean out the dishwasher and filters.