




CMA Dishwasher operating Procedure

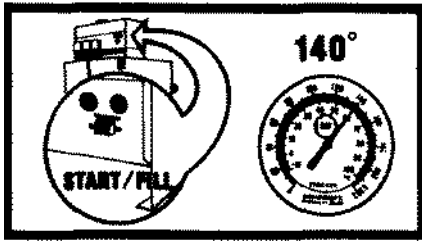


1 • To fill with water, push or flip the **FILL** button. Water temperature should be 140°. Report to your supervisor if it is lower than 140° or higher than 150°.

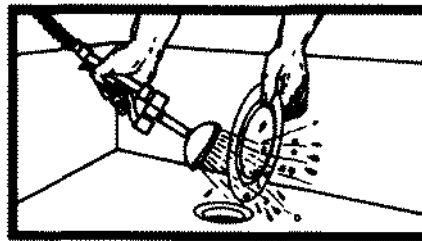


2 • Remove garbage from plates before racking.

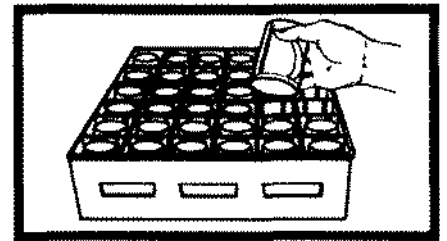


3 • All dishes, cups and silverware should be placed in proper dish, cup or silver racks.
• **Do not overload racks.**

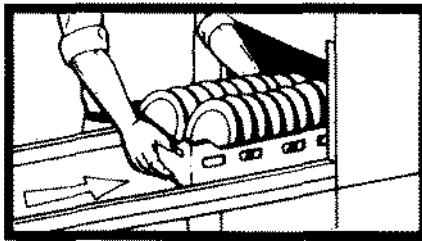

4 • Slide fully loaded rack into the machine.

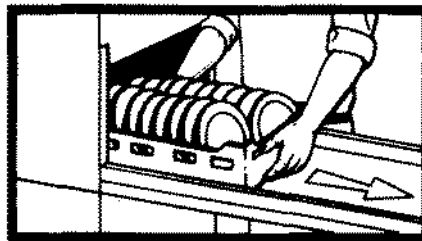


5 • Remove the clean rack of dishes. Allow dishes to dry completely before use. Tip cup and glass racks.

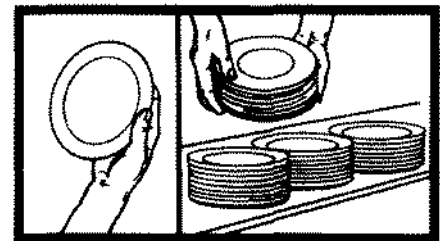


6 • inspect dishes — Remove and stack in proper place.




7 • Fill container with warm water. Add ounces of pre-soak and detarnisher. Pre-soak flatware for 15 minutes.

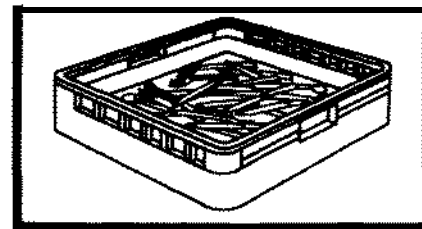


8 • Remove and place flatware in flat rack. Rinse. Run thru the dishwasher.

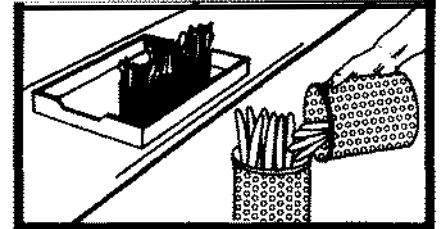


9 • Place in flatware containers with handles down and wash a second time. Transfer into another flatware container to insure proper sanitary condition.

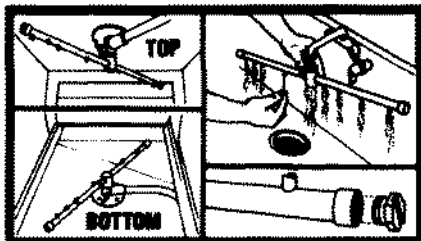

10 • Drain the machine to clean. Remove spray arms and end plugs to clean upper and lower spray arms. If spray jets are clogged, use a toothpick to open, and rinse under faucet. Arms will not turn if jets are clogged.

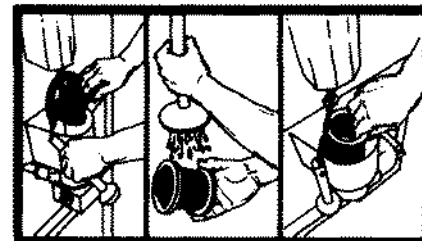

11 • Remove drain screen. Thoroughly clean screen by scrubbing with heavy brush. Rinse under faucet and reinstall.

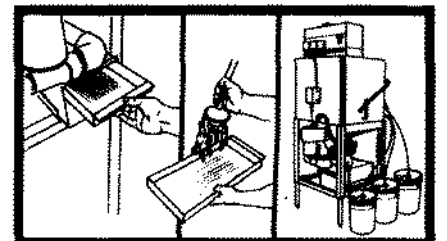

12 • Remove and clean scrap trap drawer. Rinse with spray. Check chemical buckets regularly and replace any empty buckets.

For dishwashing chemicals or service call
Dishwashers Direct 0800 7311 567