


## Carlton Master operating instructions

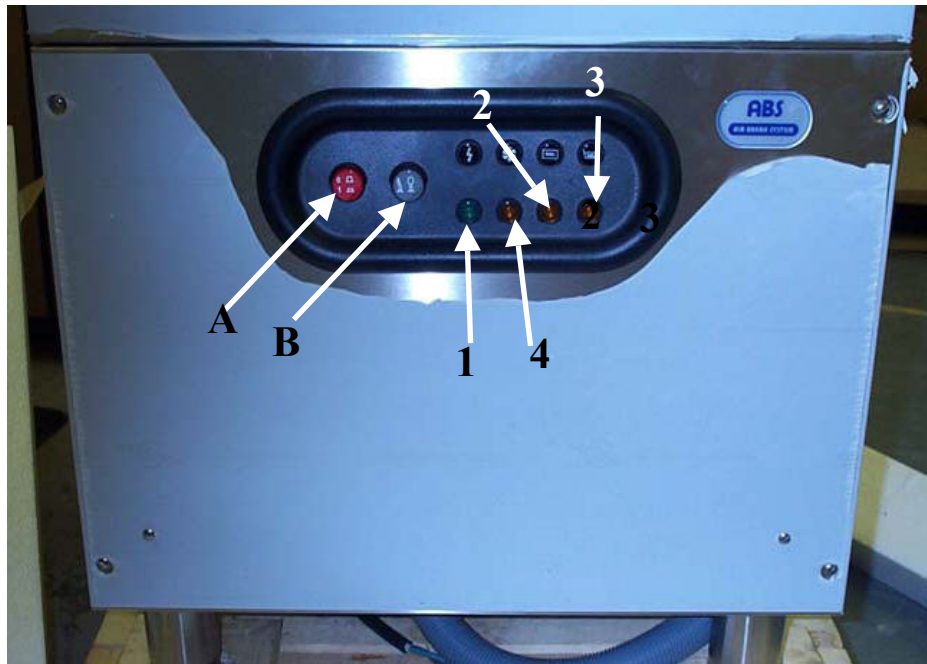

- 1) To fill machine make sure the **stand pipe/plug** is correctly fitted inside the machine and switch on **(button A)** light **No 1** will illuminate
- 2) The machine will fill and water will be transferred from the rinse boiler to the wash tank, this will happen several times
- 3) Once all water is transferred light **No 2** will illuminate indicating rinse boiler is heating, once heated the light will go **OUT** and light **No 3** will illuminate indicating wash tank is heating
- 4) The filling/heating process takes approximately **30 minutes**
- 5) Once heating has finished and both lights **(2 and 3)** have gone out the machine is then ready to wash **(ONLY WAIT FOR BOTH LIGHTS TO GO OUT ON INITIAL FILL)**
- 6) Select wash cycle length **2 or 4 minutes** by pressing **button B**
- 7) To activate wash cycle **lift hood** and insert loaded basket. **Close down** hood and the machine will automatically start a wash cycle. Light **No 4** will illuminate whilst in a cycle and will go out when finished
- 8) The machine has a rinse interlock system fitted which means it will continue to wash until the correct rinse temperature is gained, so there is a guaranteed rinse at **85° C** (the rinse cycle will only activate when light No 2 has gone **OUT**)
- 9) To drain machine at the end of a shift switch off at **(button) A**. Lift hood and remove **stand pipe/drain plug**, the water will then drain away
- 10) Once drained remove and clean filter, also clean wash and rinse arms/jets if necessary

Any problems call Dishwashers Direct on: **0115 9613 720**