


CARLTON MAXI DP OPERATING INSTRUCTIONS

Please note the control panel below shows all switches in the carlton range

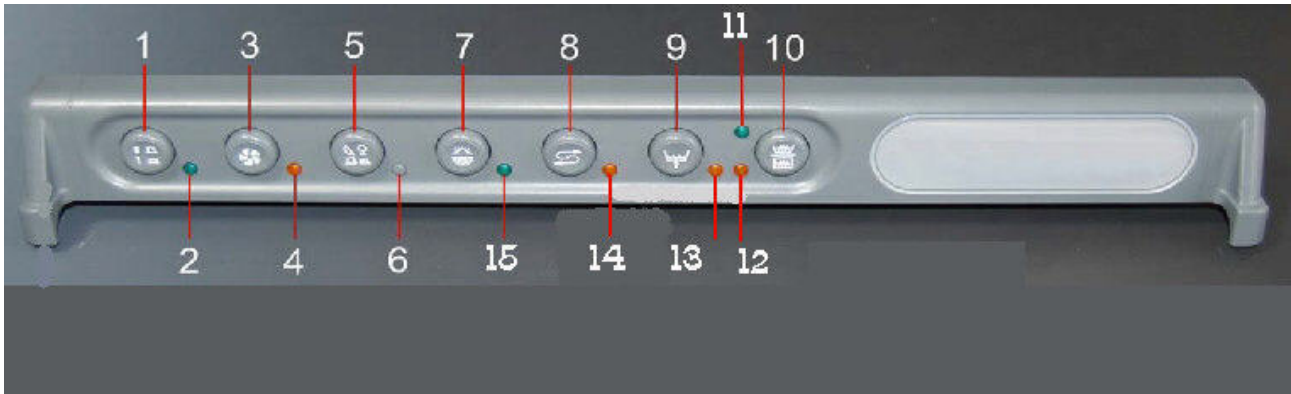

1. Make sure the WATER & POWER to the dishwasher are **TURNED ON**.
2. Make sure **all** filters are in place & switch on machine (No1). Light (No2) will illuminate.
3. Wait a few minutes whilst the rinse boiler heats up, a light will illuminate whilst the boiler is heating (No12). Once heated, water will be transferred from the boiler to the wash tank. **This process is repeated approx 10 times (approx 30 minutes)**.
4. When the water is transferred the detergent dispenser is activated and a pre-dose is dispensed.
5. Allow the wash tank to heat **allowing a few minutes**, light (No11) will illuminate. Once heated, the ready light (No11) will go out indicating the machine is now **ready** to wash.
6. Select the wash cycle length (No5) **for either 2 or 4 minutes**.
7. Press the wash cycle button for approx 3 seconds (No3), the cycle light (No4) will illuminate whilst the machine is in a cycle and **WILL** wash until the rinse boiler has regained its heat. **IT WILL THEN** rinse at **85°C**.
8. When the wash cycle has finished the cycle light will go out (No4) and **only** then it is **recommended** to remove the basket and place outside the dishwasher to dry.
9. **Repeat** step 7 for further washes.
10. To drain the machine at the end of a shift, turn **OFF** on/off switch (No1) and then press the drain button (NO 9) and **hold for approx 3 seconds**, the machine will automatically drain and turn itself **OFF** when finished.
11. When the machine is drained, clean/rinse **all** filters and clean machine.
12. Unblock wash/rinse jets (if required).
13. In hard water areas and if you have a **manual** water softener, it is **STRONGLY** recommended that you regenerate it at **least** every other day to reduce lime scale build up.

**For further information, please call Dishwashers Direct on
0800 7311 567**