


CARLTON MIDI DP OPERATING INSTRUCTIONS

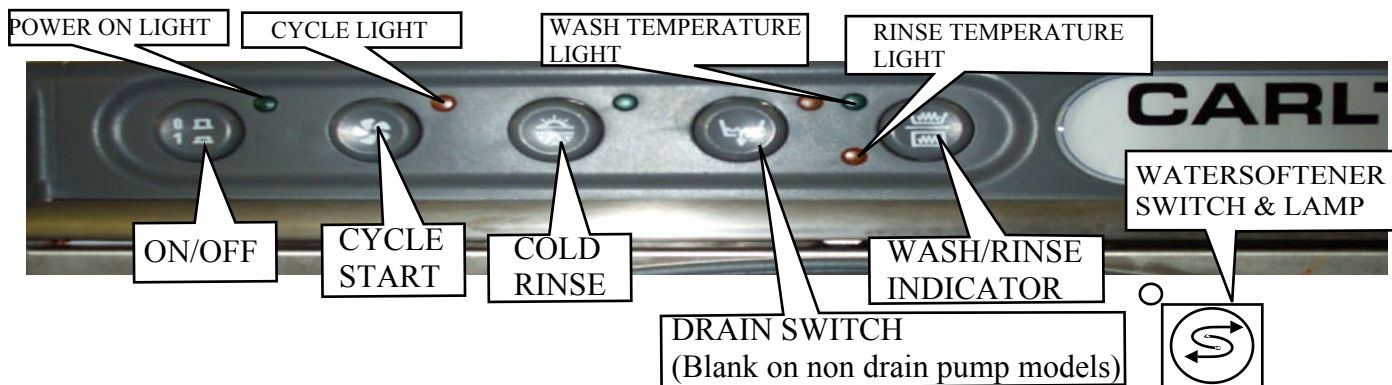

- 1, Make sure the water & power are **switched on** (power on light)
- 2, Make sure plug/stand pipe is secured **inside** machine
- 3, Close the door and press **on/off** switch, machine will automatically fill and stop when the correct level is obtained
- 4, The detergent will automatically dose during fill mode
- 5, Once full the machine will heat in two stages, rinse boiler (**orange**) first then the wash tank (**green**)
- 6, Whilst heating the rinse temperature light will illuminate first followed by the wash temperature light
- 7, When the wash temperature light has gone out (**green**) the machine is then ready to wash (**this procedure applies to initial fill only**)
- 8, When ready open door and insert basket. close door and press **cycle start**
- 9, The machine will wash and the **cycle light** will illuminate during the wash cycle
- 10, When the wash cycle has finished the **cycle light** will go out. you can then open the door and remove the basket
- 11, This machine if fitted with a **cold rinse** option (if the glasses need to be cooled down quickly) simply press and hold the **cold rinse** switch to rinse with cold water
- 12, (On models fitted with a drain pump) turn **OFF** machine and press and hold the drain switch, the machine will drain whilst the switch is held in and stop when released (**light will illuminate when draining**)
- 13, (If the machine is fitted with an integral watersoftener), to operate switch **OFF** at **ON/OFF** switch and drain machine as above. Pour in 1 CUP of **granular salt** into the salt container and tightly screw on lid, then close the door and refill the machine as normal then press and hold the regeneration switch for approx 3 seconds.
The watersoftener will regenerate (**light will illuminate**) and switch off when finished
- 14, Clean out filters and wash arms if necessary

ANY PROBLEMS PLEASE CALL DISHWASHERS DIRECT
ON **0800 7311567**