


Kromo Lux 60 EL Operating instructions

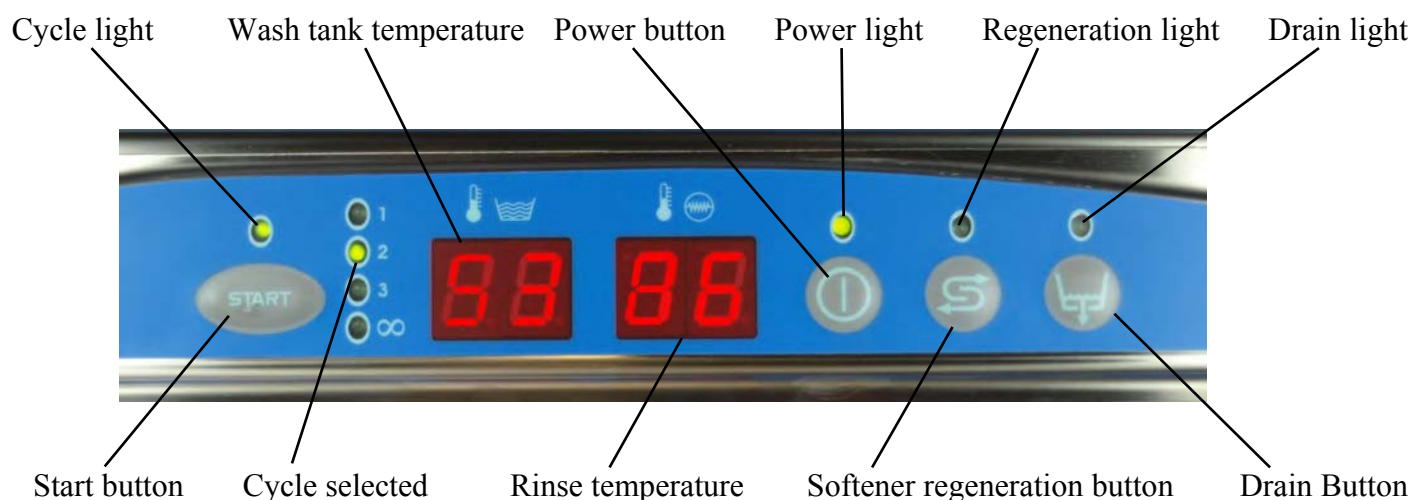

To switch on

Make sure that the machine is correctly assembled with all of the filters, drain standpipe, wash arms and rinse arms in place (top and bottom). Ensure the power is switched on to the machine, power light the on machine will be red.

Press and hold the power button for 3 seconds, the power light will turn to green and the machine will start to fill. Within 30 seconds the machine will stop filling and the machine will start to heat, when the rinse temperature reaches at least 60°C and the wash temperature reaches 45°C (after approximately 20 minutes). Note **The machine will take longer to heat on a 13 amp electrical supply.** The dishwasher is ready to use.

The dishwasher is now ready to use.

To set the cycle time press and hold the start button continuously until the desired cycle is selected then release it.

To start the wash cycle press the start button until the green cycle light comes on (no longer than 3 seconds), the machine will wash for the selected time, when the wash part of the cycle has finished the machine will then perform a rinse cycle. When the whole cleaning cycle has finished the display will read end. You can now unload the machine and reload it ready for the next wash cycle.



To switch off

At the end of the day press and hold the power button for 3 seconds, the power light will turn red, remove the drain standpipe, press the drain button for 3 seconds, the drain light will turn green, then machine will totally drain down. When the machine is totally drained and the drain light has gone off, switch the machine off at the wall and follow the machine cleaning procedure on the reverse side.



Kromo Lux 60 **Daily** cleaning procedure

To maintain correct operation, to comply with the warranty and to comply with health and safety legislation your machine needs to be serviced twice a year by a qualified professional.

Ensure that the machine is drained down and switched off.
Remove any debris from inside the machine


Remove top and bottom wash and rinse arms and clean them

Unscrew & lift out



Remove main wash tank filter and clean it

Lift up

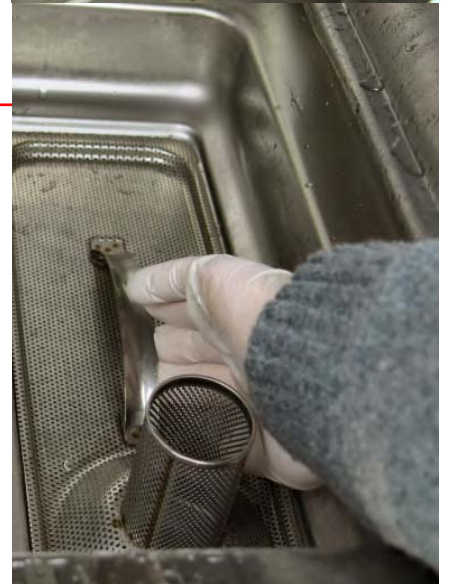

Ensure that the wash tank is clean then

With filter removed



Refit top and bottom wash and rinse arms
Refit the main wash tank filter and the drain standpipe.


Check that there is detergent in the detergent container and that the end of the detergent tube is in the detergent liquid.

Check that there is rinse aid in the rinse aid container and that the end of the rinse aid tube is in the rinse aid liquid

Internal water softener regeneration

When the water softener needs regenerating the regeneration light flashes, you should regenerate the water softener at the end of the current washing up period i.e after lunch.

To do this you need to switch the machine off and drain it. To do this press and hold the power button for 3 seconds, the power light will turn red, remove the drain standpipe, press the drain button for 3 seconds, the drain light will turn green, then machine will totally drain down. When the machine is totally drained and the drain light has gone off, the power light will be red.

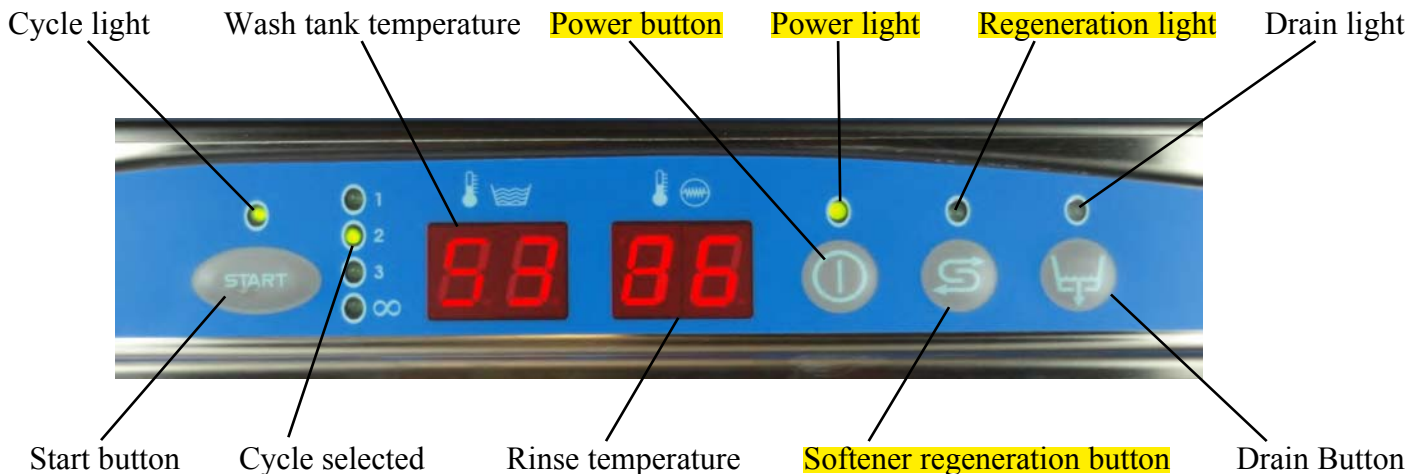

Remove the top from the salt container and ensure that it is topped up, refit the top.

If more salt is needed refill with granular salt intended for commercial dishwasher water softeners.

It is important that if you spill any salt inside the dishwasher that this is removed.

Press and hold the regeneration button for 3 seconds, the regeneration light will turn green and remain on throughout the regeneration cycle..

The regeneration cycle will last 20 minutes, when the cycle is complete the regeneration light will go out.

The dishwasher now needs to be rinsed out, to do this press and hold the start button until tank wash cycle starts this will last around 15 seconds, when this is complete you can switch the machine on and use it in the normal way.

