


Kromo Lux 61 EL Operating instructions

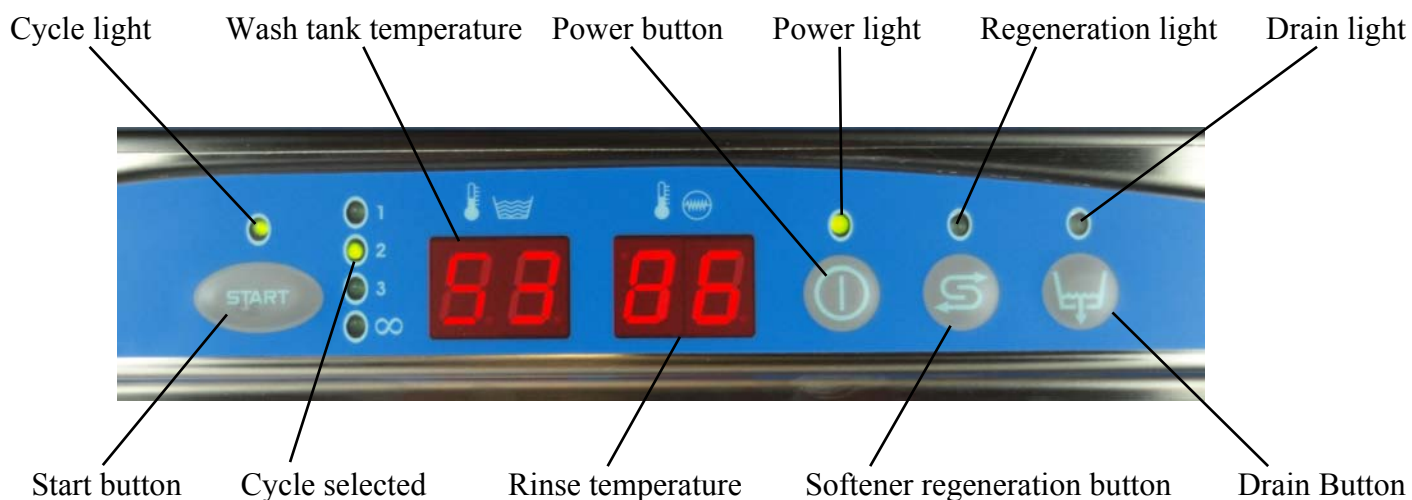

To switch on

Make sure that the machine is correctly assembled with all of the filter, wash arms and rinse arms in place (top and bottom). Ensure the power is switched on to the machine, power light on machine will be red.

Press and hold the power button for 3 seconds, the power light will turn to green and the machine will start to fill. Within 30 seconds the machine will stop filling and the machine will start to heat, when the rinse temperature reaches at least 60° C (after approximately 8 minutes) press and hold the start button until the green cycle light comes on, (no longer than 3 seconds), The dishwasher will then perform a wash cycle, a drain cycle and then a rinse/fill cycle, when complete the display will read End.

The dishwasher is now ready to use.

To set the cycle time press and hold the start button continuously until the desired cycle is selected then release it.

To start the wash cycle press the start button until the green cycle light comes on (no longer than 3 seconds), the machine will wash for the selected time, when the wash part of the cycle has finished the machine will drain completely, then the rinse cycle will start. When the whole



After the cycle has ended, unload the dishwasher, reload it and it is then ready to wash again

To switch off

At the end of the day press and hold the power button for 3 seconds, the power light will turn red, then press the drain button for 3 seconds, the drain light will turn green, then machine will totally drain down. When the machine is totally drained and the drain light has gone off, switch the machine off at the wall and follow the machine cleaning procedure.

Kromo Lux 61 **Daily** cleaning procedure

To maintain correct operation, to comply with the warranty and to comply with health and safety legislation your machine needs to be serviced twice a year by a qualified professional.

Ensure that the machine is drained down and switched off.
Remove any debris from inside the machine

Remove top and bottom wash and rinse arms and clean them

Unscrew & lift out



Remove main wash tank filter and clean it

Lift up



Remove small secondary filter and clean it

Lift up



Ensure that the wash tank is clean then

Refit small secondary filter
Refit the main wash tank filter
Refit top and bottom wash and rinse arms

Checks that there is detergent in the detergent container and that the end of the detergent tube is in the detergent liquid

Check that there is rinse aid in the rinse aid container and that the end of the rinse aid tube is in the rinse aid liquid

