


Dishwashers Direct Limited

Commercial dishwasher & glass washer specialist

Manual Water Softener Instructions

Normal service mode

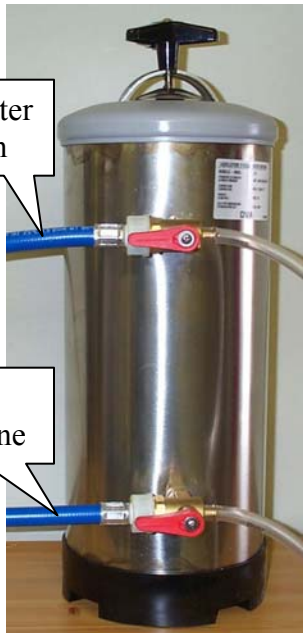

In the normal service mode ensure that the top and bottom red levers face the direction of the Blue water hoses

To Add Salt



To add salt move the top red lever 180°, water will start running out of pipe A. Wait until the water has stopped running.

Dishwashers Direct Limited

Commercial dishwasher & glass washer specialist



Unscrew top black knob and remove the top.



Add approx 3 pints of dishwasher salt (or fill to within 1 inch or 25mm of the top). Refit the top and screw hand tight.

Regeneration



Hose
B

To regenerate the water softener move the top red lever 180°, move the bottom red lever 180°. Water should now start running from hose B, allow the water to run for 30 minutes. Then return the red levers to the normal service mode